AIR FACTORS
4771 ARROYO VISTA, SUITE D
LIVERMORE, CA 94551
PH. # 925-579-0040
FAX # 925-579-0044

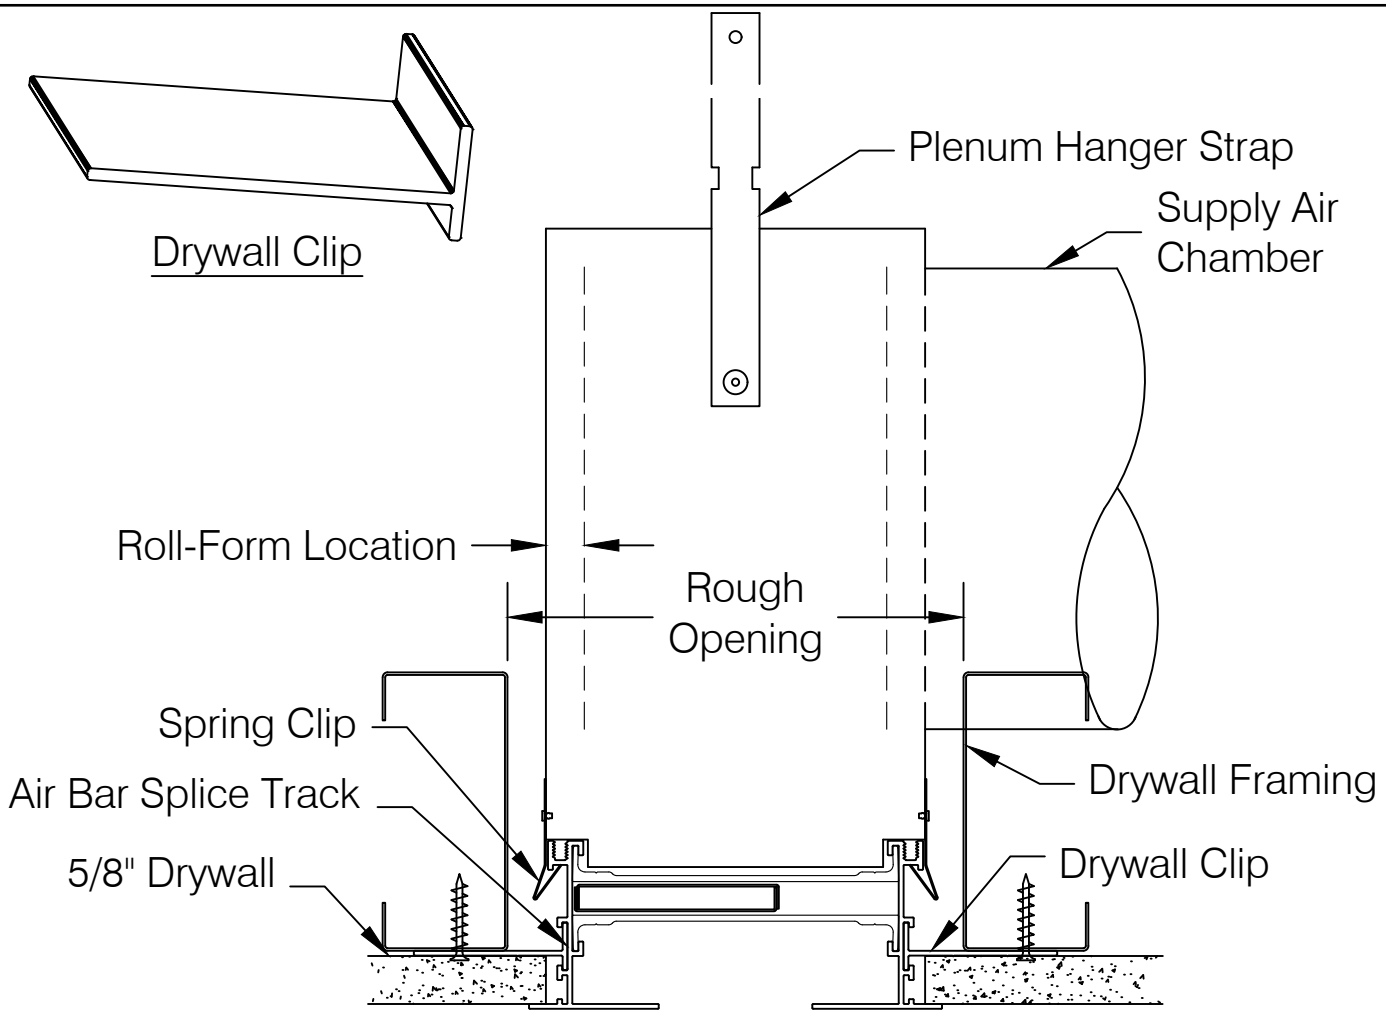


# INSTALLATION USING DRYWALL CLIPS

1. Drywall frame opening should match your Air Bar. See Frame Opening schedule for dimensions.
2. Assemble Air Bar with Drywall Clips in the splice track (24" on center) and install onto framing.
3. For continuous runs (more than one unit) install splice plates into the splice track on both sides of Air Bar.
4. Install end caps at each end of the Air Bar by sliding the end cap tabs into the splice track.
5. Rotate Spring Clips down to secure Supply Air Chamber to Air Bar. Secure with hanger wires to the Plenum Straps, or with additional framing, screw into the roll-form on plenum ends.
6. Install drywall to complete the finished ceiling.

9-51-B